


**P300-G5**

---

**IP65 300W WW+R7+G7+B7+A7 Par**

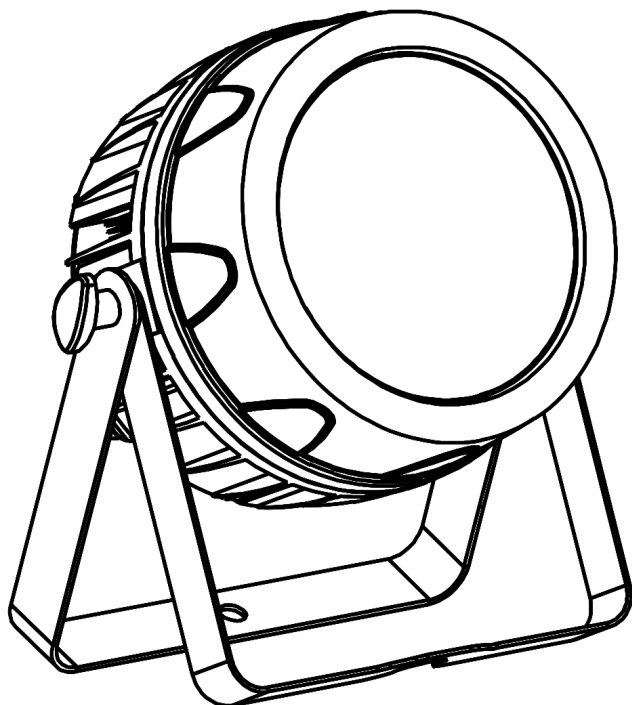

USER MANUAL

Please read manual carefully before use

# CONTENTS

1. Safety Instructions .....	3
2. Technical Specification .....	5
3. DMX Set Up .....	6
4. Display .....	7
5. Menu .....	8
6. LUX Data .....	10
7. DMX Channel List .....	10
8. Mounting .....	14
9. Product Size .....	15
10. Attention .....	15
11. Trouble Shooting .....	16
A. The unit does not work, no light and the fan does not work .....	16
B. Not responding to DMX controller .....	16
C. One of the channels is not working well .....	16
12. Fixture Cleaning .....	17

Thank you for choosing our LED lights. Each facility has been rigorously tested. Please check whether the facility has been damaged during transportation. If you find any parts are missing or broken, please contact the manufacturer immediately. Please do not return the product without any

notice!

# 1.Safety Instructions




Please read this manual carefully, which includes important information on installation, use and maintenance.

## Attention

- Please keep this USER MANUAL for future consultation. If you sell the facility to another user, be sure that they also receive this USER MANUAL.
- Please open and check in details and make sure there is no transportation damage.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the facility.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The facility must be installed in a location with adequate ventilation, at least 50 cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Make sure the power is disconnected before removing the facility.
- Make sure there are no flammable materials close to the unit while operating as it is fire hazard.
- Use safety cable when fixes this facility. Do not handle the facility by taking its head only, but always by taking its base.
- Maximum ambient temperature is 40 °C . Do not operate it where the temperature is higher than this.
- Please stop using the facility for serious operating problems. Stop using the facility immediately. Never try to repair the facility by yourself, but be a

professional technician. Please contact the supplier's service department for technical support.

- Do not touch any wire during operation as high voltage might be causing electric shock.
- When the housing or lens is damaged, it must be replaced.
- Direct sunlight or any other strong light source penetrating the lens of the light will cause serious internal damage to the facility. During unpacking, installation, use and long-term outdoor idleness, it is forbidden to expose the lens of the facility to direct sunlight or any other strong light source at any angle. It is forbidden to aim the beam of one light directly at another light.

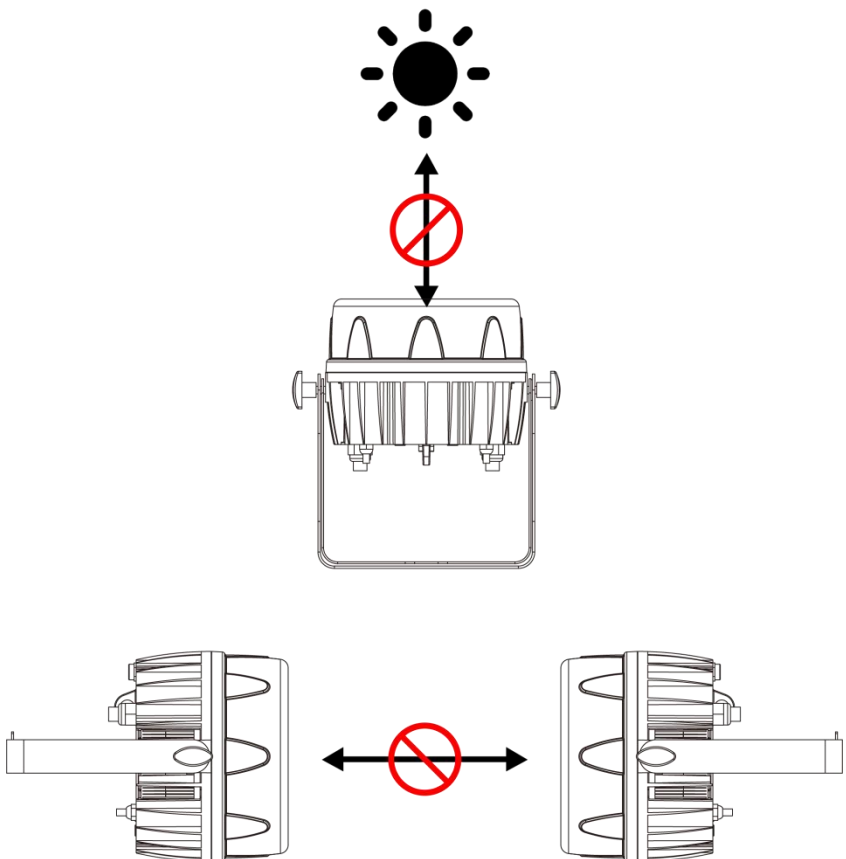

## Caution

There are no accessories available, do not open the housing and try to repair the facilities yourself. Please contact our company for after service.

## Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.


The facility must be installed by professionals, and keep it far away from fire, walking road, and easy touched place.

## 2. Technical Specification

Light Source	42pcs LED R7+G7+B7+21WW
LED Lifetime	≥ 50000H
Power Voltage	AC100-240V , 50-60Hz
Power Consumption	250W
Beam Angle	110°
Control Modes	DMX512/ Auto/ Sound/ Master/ Manual/ RDM
DMX Channel	10/ 16 Channel
Protection Rating	IP65
Display	TFT1.54 Display
Data In/Out Socket	Hand in Hand 3-pin XLR sockets
Power Socket	Power-Con in/ out

Housing Material	Aluminum		
MAX. Connection	8 units (240V, 50Hz)	1.5mm <sup>2</sup>	power cable
	4 units (100V, 60Hz)	1.5mm <sup>2</sup>	power cable
Dimension	285mm*214mm*287mm		
Net Weight	5.5kg		
Carton Package	260mm*260mm*265mm	1in1	GW: 4.7kg
	555mm*555mm*295mm	4in1	GW: 19.6kg
Flight Case	880mm*530mm*470mm	5in1	GW: 51.6 kg
Features	Full light range dimming, 65536-level dimming accuracy. fast strobe 1-25Hz.		
Configuration	Signal cable	1pc	
	Power cable	1pc	
	Manual	1pc	

3. DMX Set Up

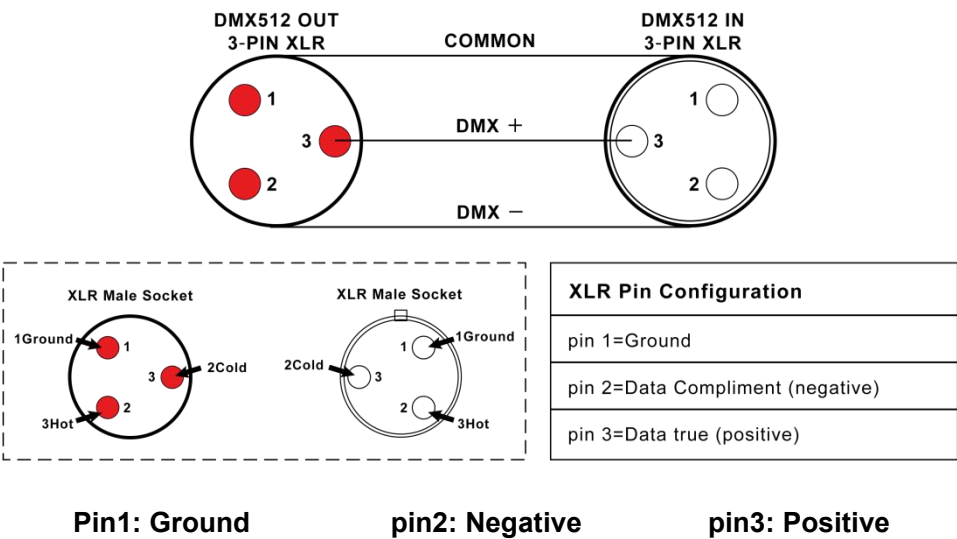

DMX Connection

To ensure optimal transmission of DMX data, please connect facilities in the shortest way. The connection order won't affect the DMX address code. For example, if the address code is set to 1, no matter where the facility is connected, its address code will not change. This is determined by the principle of the DMX controller.

## Operation method

You can operate in the following three modes:

- Auto mode - the light can automatically complete all color changes
- DMX control mode - each light can be individually controlled by a standard DMX512 console
- Master mode - any light can work as a host in any of the above modes, and the other lights will work synchronously as slaves

## 4. Display

There are four buttons on the LED panel: MENU, UP, DOWN, and ENTER.



**MENU**



**UP**




**DOWN**



**ENTER**

Please press the "MENU" to exit or return to the previous menu, press "UP" or "DOWN" to select the upper and lower menus or adjust the values, and press "ENTER" to confirm.

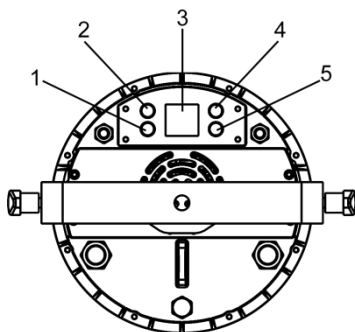

After powering on, the facility will automatically return to the last operation when it was powered off, then get into standby status. For more details, please refer to the information below↓

## 5. Menu


1-MENU 2-UP 3-DOWN 4-ENTER				
Menu	1.Address	001~512		Setting 001-512
	2.Channel	1.10CH		
		2.16CH		
	3.Mode	1.DMX512		
		2.Auto	Master	
		3.Sound		
		4.Manual	Alone	1.Red: 0-255
				2.Green: 0-255
				3.Blue: 0-255

				4.White: 0-255
				5.Strobe: 0-255
	4.Sound	0-100		Sound sensitivity
	5.Language	English		Language selection
		Chinese		
	6.Display	1.Yes		Backward selection
		2.No		Forward selection
	7.No signal	1.Black out		2.Hold
	8.Fan set	1.Auto, 2.High, 3.Low		
	9.Inform	1.CH Value		Show the Channel information
		2.Temp /℃		Show the temperature information
		3.Soft V***		Show the version information
	10.Default	Yes		Reset factory setting
		No		
	11.Adjust	Pass word ****		Changing the value of R/G/B/W can adjust the white balance
		1.Red: 0-255		
		2.Green: 0-255		
		3.Blue: 0-255		
		4.White: 0-255		

## 6. LUX Data

### R7+G7+B7+A7+14WW

R lux	1400	239	82	30.4
G lux	1940	329	115	41.2
B lux	446	75	26	10.7
A lux	1730	293	102	36.3
WW lux	2680	456	159	59.6

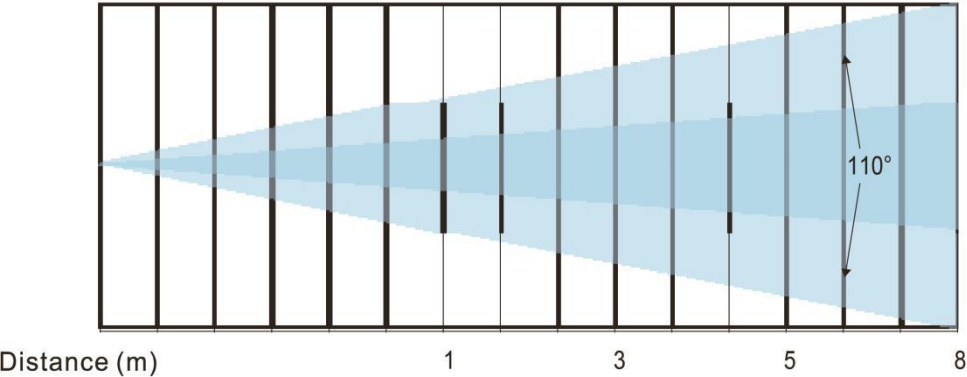

## 7. DMX Channel List

### ► 10CH Mode

CH	Function	DMX Value	Description
1	Dimmer	0-255	From dark to bright
2	Strobe	0-3	Strobe dimming
		4-203	Synchronous strobe speed from slow to fast (1Hz-25Hz)

CH	Function	DMX Value	Description
		204-255	Random strobe
3	R dimmer	0-255	From dark to bright
4	G dimmer	0-255	From dark to bright
5	B dimmer	0-255	From dark to bright
6	W dimmer	0-255	From dark to bright
7	A dimmer	0-256	From dark to bright
8	Linear color temperature	0-4	No function
		5-255	Color temperature from warm to cold
9	Macro color	0-9	No function
		10-14	Macro color 1
		15-19	Macro color 2
		....	....(5numbers 1 macro color)
		155-159	Macro color 30
		160-255	Macro color 31
10	Dimming mode	0-49	Mode -1
		50-99	Mode -2
		100-149	Mode -3
		150-255	Mode -4

► **16CH Mode**


CH	Function	DMX Value	Description
1	R	0-255	From dark to bright
2	Red adjust	0-255	From dark to bright
3	G	0-255	From dark to bright
4	Green adjust	0-255	From dark to bright
5	B	0-255	From dark to bright
6	Blue adjust	0-255	From dark to bright
7	W	0-255	From dark to bright
8	White adjust	0-255	From dark to bright
9	A	0-255	From dark to bright
10	Amber adjustment	0-255	From dark to bright
11	Dimmer	0-255	From dark to bright
12	Dimmer adjust	0-255	Dimming adjustment control
13	Strobe	0-3	No function
		4-203	Synchronous strobe speed from slow to fast (1Hz-25Hz)
		204-255	Random strobe
14	Linear color temperature	0-4	No function
		5-255	Color temperature from warm to cold
15	Macro color	0-9	No function

CH	Function	DMX Value	Description
		10-14	Macro color 1
		15-19	Macro color 2
		....	....(5numbers 1 macro color)
		155-159	Macro color 30
		160-255	Macro color 31
16	Dimming mode	0-49	Mode -1
		50-99	Mode -2
		100-149	Mode -3
		150-255	Mode -4

## 8. Mounting

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight without any deformation. When installing the unit must be secured with a secondary safety attachment, e.g. an appropriate safety cable. Never stand directly under the facility while mounting, uninstalling or repairing facilities.

High-altitude mounting requires for extensive experience, including working load limits calculating , installation material, and periodic safety check of installation materials and facilities. If you're lack of mentioned qualifications, do not attempt the installation yourself. These installation should be checked by a skilled person annually.

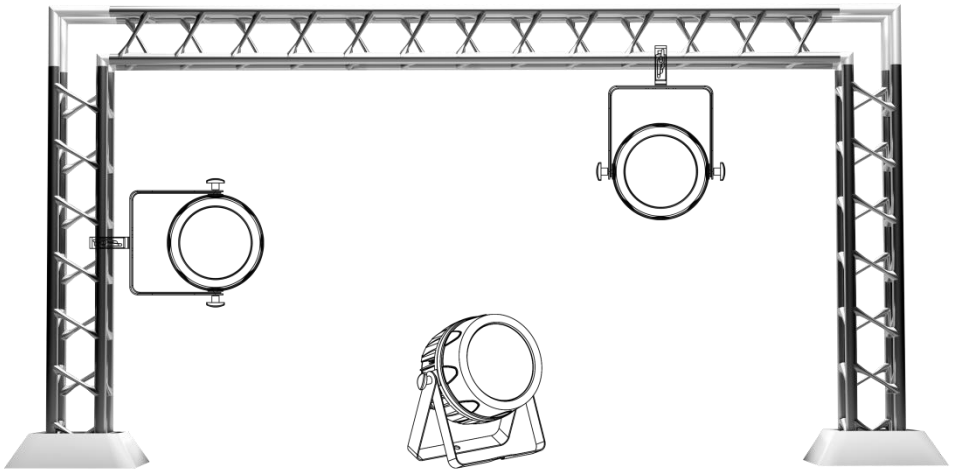


P300 G5 works properly in above different mounting, hanging upside-down from a ceiling, sideways on trussing, or set on smooth horizontal surface. Be sure this facility is at least 12m (40ft) away from flammable materials (decoration etc.). Always use and install the safety cable to prevent accidental

damage or injury from the facility failure. Never use handles for secondary attachment.

**NOTICE:** The suitable environment temperature of the facility is from -25° C to 45° C. Do not place this facility in an environment where the temperatures are under or above the temperatures stated. This will help the fixture run at its best and extend the lifetime.

## 9. Product Size

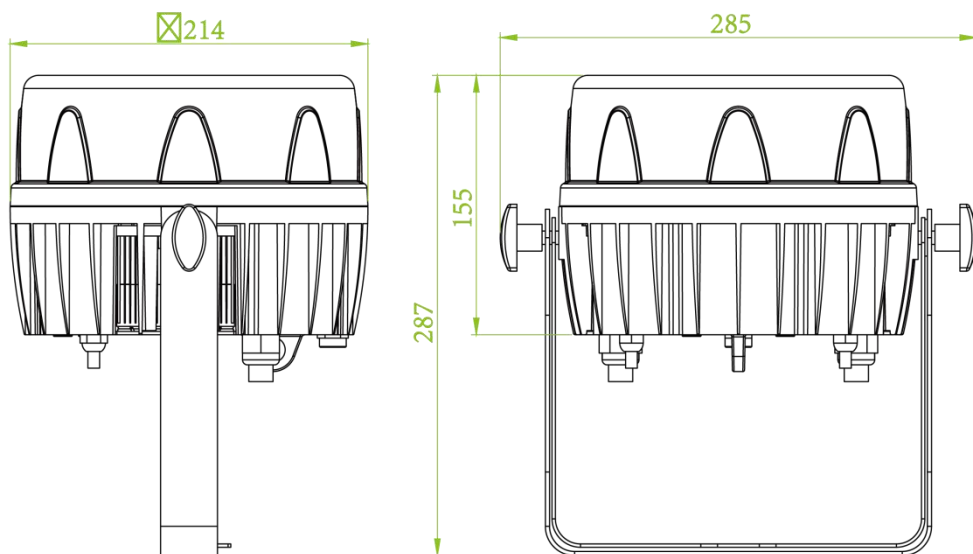

## 10. Attention

1. When the facility is powered on, please avoid looking directly at the facility.
2. When assembling/ replacing LED, be sure to cut off the main power of facilities before opening the cover upon the LED board.

## 11. Trouble Shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

### **A. The unit does not work, no light and the fan does not work**

1. Check the status of power connection and fuse.
2. Check the voltage.
3. Check the power indicator.

### **B. No response to DMX controller**

1. If the display screen flashes, check the DMX signal connector and signal line whether the connection is correct.
1. If the display screen does not flash, but no response to channel control, check whether the address code or channel setting is correct.
1. If the DMX signal transmission is intermittent, check if the XLR and DMX cables are in good condition.
2. Try using another controller.
3. Check if the DMX cables is too close to the high-voltage wire, which may damage or interfere with the signal circuit.
6. The facility has not completed the self-check.

### **C. One of the channels is not working well**

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

## 12. Fixture Cleaning

The lens and diffuser should be clean frequently to get better light effect. Wipe frequency according to the environment. Humidity, excessive smoke, and dirty environment will make lens dusty.

- Use soft cloth and special glass cleaner.
- Wipe lens surface at least every 30 days.
- Use vacuum cleaners or air guns to clean the interior structure of the facility, at least twice a year.



Warning:

To avoid the danger of lighting strikes and fire, please do not place the facility in a humid environment. Do not disassemble it without permission, otherwise, the manufacturer will not provide warranty. If the facility fails, please contact the manufacturer first.

## Product Warranty Card

Product: IP65 300W WW+R7+G7+B7+A7 Par

Model NO.: P300 G5

Manufacture Date:

User:

Purchase Date:

Manufacturer:

Sales Store:

Address:

ATTN.:

ATTN.:

Phone:

Phone:

Note: The above blank must be filled in and sealed by the end user or sales point, otherwise no warranty will be provided. (Below please check the warranty period and terms)

Warranty Period: This facility is warranted for 2 years from the date of purchase.

Warranty Terms:

1. Except for man-made damage and natural disasters
2. If the facility fails to function properly during the warranty period, please contact our after service department or our local distributor directly.
  - 1) Fail to present a valid warranty card.
  - 2) Omissions, alterations, and trade sales names on the warranty card.
  - 3) Failures and damage caused by force majeure.
  - 4) Failures and damage caused during transportation and handling.
  - 5) Failures and damage caused by failure to follow the instructions for use.
  - 6) Failures and damage caused by disassembly, repair, and modification of the product without the manufacturer's authorization or by non-professionals.
  - 7) Failures caused by the use of accessories not approved by the factory or not matched by the factory.

▲ Thank you for reading this manual. Please keep it for future reference.